

SHURE®

LEGENDARY
PERFORMANCE™

USB MICROPHONE

MV51 USER GUIDE

Le Guide de l'Utilisateur

Bedienungsanleitung

Guia del Usuario

Guida dell'Utente

Manual do Usuário

Руководство пользователя

日本語

사용자 가이드

繁體中文

Panduan Pengguna



© 2015 Shure Incorporated
27A24501 (Rev. 2)

Printed in U.S.A.



USB Microphone

The Shure MV51 is a professional-quality USB condenser microphone, ideal for home recording, podcasting, and video conferencing. The attractive and durable all-metal design features an adjustable kickstand for desktop use, and can also mount onto a microphone stand. A touch panel user interface provides control of microphone gain, headphone level, application modes, and muting.


Mounting and Placement

Desktop

Aim the microphone towards the sound source by adjusting the kickstand.

Microphone Stand

Unscrew the end cap to thread the kickstand onto a standard 5/8" microphone stand.

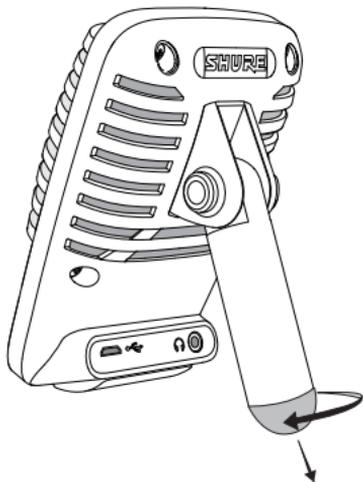

Kickstand End Cap

Quick Setup

The MV51 is compatible with most devices that have a USB or Lightning connector.

1. **Connect the microphone to a computer or mobile device. Use the appropriate cable (USB or Lightning).**

Drivers will be installed automatically. The touch panel illuminates to indicate a successful connection.

2. **Open the sound control panel. Select the Shure MV51 driver.**

Raise the level on both the MV51 product and the host computer for proper monitoring.

3. **Confirm that the MV51 is the selected audio device.**

Plug headphones into the MV51 device audio output and play an audio track. If you can hear sound, the microphone is functioning properly.

If your computer settings default to another device, open the sound control panel and select the MV51 device.

4. **Adjust the headphone volume on the Shure MV51 device driver.**

Open the MV51 driver from the sound control panel and raise the headphone volume from the playback or output tab.

5. **Use the MODE button to select the preset mode that fits your application.**


If the audio is too quiet or causes distortion, adjust the gain manually. Refer to the "Adjusting Microphone Level" topic in this guide for more details.

6. **In your recording application, select the MV51 as the input source.**

See your software user guide for information on assigning input sources.

You are ready to record.

Touch Panel Interface Controls

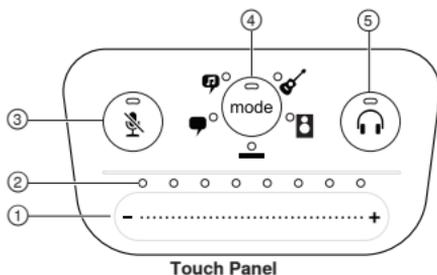

① Volume Control Slider

Adjust microphone or headphone level by sliding your finger across the control surface.

- Press the mode button to activate microphone level.
- Press the headphone button to activate headphone volume.

② LED bar

Displays microphone and headphone level. The LED color indicates the level being displayed or adjusted.

- **Green:** Microphone level
- **Orange:** Headphone level

③ Mute Button

Press to mute and unmute the microphone.

④ Mode Selector

Press to select preset mode.

⑤ Headphone Volume Selector

Press to select headphone level controls (orange LED bar). Then use the volume control slider to adjust headphone level. Press again to return to microphone level display (green LED bar).

Preset Modes

Five selectable modes optimize settings for equalization and compression to match your recording needs. Set your volume level and scroll through the modes to find which setting sounds best. The preset settings will not affect the microphone level.


Mode	Icon	Application
Speech		Use for speech in podcasting
Singing		Use to capture solo or group vocal performances
Quiet and Acoustic Music		Suited for acoustic instruments and quiet music applications
Loud Music or Band		Use when recording a band or other loud sources
Flat		A completely unprocessed signal (no equalization or compression settings used). Use when processing the audio after recording.

Applications

This section suggests microphone placement for typical use cases. Keep in mind that there are many effective ways to record a given source. Experiment with the following microphone placement and settings to find what works best.

Podcast and Voice Recording

Set the microphone to the **Speech** mode. Speak directly into the front of the microphone at a distance of 2-12 inches (5-30 cm) away. Speaking closer to the microphone results in more bass response, similar to voices on a radio broadcast. Make additional gain adjustments if necessary.

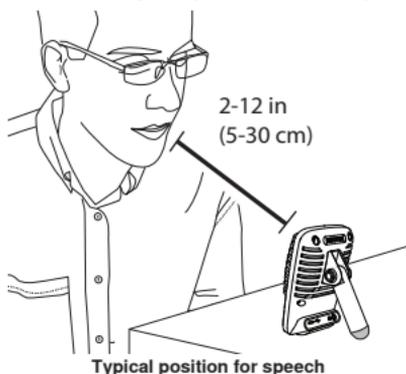

Acoustic Instruments and Music


To capture acoustic sources, such as singing, acoustic guitar, soft percussion, or other musical instruments, use a close microphone placement.

Aim the microphone directly at the sound source. For a single source, such as a string instrument or a vocalist, place the microphone 6 to 12 inches (15 to 30 cm) away. For a small group or a performer who is singing and playing an instrument simultaneously, use a distance of 2 to 10 feet (0.6m to 3 m). Placing the microphone farther away results in more ambient room sound.

Set the microphone to the **Acoustic** or **Singing** mode and make additional gain adjustments if necessary.


Bands and Loud Sources

To record a band with drums or amplified instruments, aim the microphone towards the group at a distance of 6 to 15 feet (1.8 to 4.6 m). Placement of the microphone depends on the size of the room, number of people, and instrument volume. If possible, walk around the room and listen to find where it sounds best.

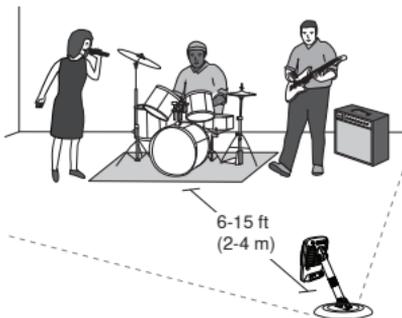

For other loud sources, such as an electric guitar amplifier, aim the microphone at the sound source from 0-18 inches (0-45 cm) away.

Set the microphone to the **Band** mode and make additional gain adjustments if necessary.

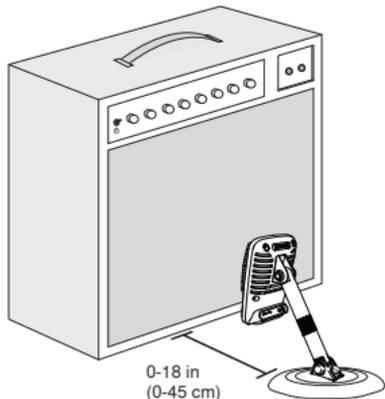

Bypass EQ and Compression (Flat)

To record a signal without any processing, set the microphone to the **Flat** mode. This mode is appropriate for any application when you want to bypass equalization and compression presets, and is ideal when applying signal processing to the recording at a later time.

Additional Tips

Shure offers additional educational publications on recording techniques for specific instruments and applications. Visit shure.com for more information.

Adjusting Microphone Level

Select the correct preset mode for your recording application. If you hear distortion or the audio is too low, adjust the microphone level in the audio or sound control panel of your computer or recording device.

Tips:

- Set the microphone level before adjusting headphone volume.
- The headphone volume does not affect the signal level sent to the computer.
- Use the volume slider on the front panel to adjust the microphone gain level.


Note: The microphone gain control is independent of the preset modes. Set your microphone level and experiment with dynamic processing options via the preset modes.



Mac audio settings panel

Adjusting Headphone Level


The headphone monitoring level is affected by the MV51 device level and the computer settings level. Raise your computer volume up and easily adjust headphones through the MV51 device headphone settings.

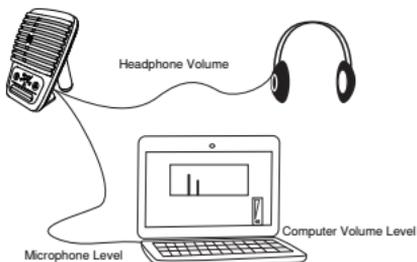

Input Meter Level

If your digital audio workstation or recording software has input meters, adjust the microphone level so it peaks between -12 and -6 dB.

Otherwise, simply listen to the audio to make sure it is loud enough and not distorting.



Peak Levels

The target range for peak levels on a typical meter is between -12 and -6 dB.

Accessing the Control Panel

PC

1. Open the sound control panel and select the **Recording** tab.
2. Open the **Shure MV51** device.
3. Under the **Levels** tab, adjust the gain level using the slider.

Mac®

1. Open the **Audio Midi Settings** panel.
2. Select the **Shure MV51** device.
3. Click on **Input** to adjust the gain using the slider.

Listening Through Headphones

The MV51 is equipped with a headphone jack to allow you to monitor audio from the computer and microphone. The signal is an equal blend of the direct microphone signal and audio playback from the computer. The benefit of this feature is that the headphone settings are conveniently located. They are easily accessed through the MV51 touch panel. To adjust the amount of playback audio in this mix, use the computer or DAW mixer settings.

Tip: When first connecting the microphone to your computer, make sure to raise the volume level in the sound control panel of the computer for a strong audio signal. Then adjust headphone level for comfortable monitoring.

Sampling Rate and Bit Depth

Sample Rate and Bit Depth settings are found in a drop down menu in the audio or sound control panel of your computer. You can adjust these variables to fit your needs. Select a lower sample rate for podcast recording, when it is important to have a smaller file for easy download. Select a higher sample rate for music and more dynamic recordings.

Tip: Record at a higher sample rate and bounce down to an M4A for a file with the highest sound quality at a manageable size.

Tip for PC users: Make sure that the sample rate and bit depth microphone settings, found in the sound control panel of the computer, match with the sample rate and bit depth selected in your software.

Troubleshooting

Issue	Solution
The display does not illuminate	Make sure that the MV51 is fully plugged in.
Audio is too low	Check the computer sound control panel settings. When first connecting the MV51 to your computer, make sure to raise the computer volume level.
Audio sounds bad	Check the sound control panel of the computer to ensure that the MV51 is fully plugged in and recognized.
Audio is distorted	Use the audio meter to ensure that volume peaks are within the target range. If level is reaching the red peak indicator of the input meter, turn the gain down.
Audio sounds unnatural or jittery	Make sure that the sample rate and bit depth microphone settings, found in the sound control panel of the computer, are consistent with the sample rate and bit depth selected in your software.
MV51 is plugged in, but the volume meter does not register a signal.	Edit the privacy setting for the iOS device under SETTINGS > PRIVACY > MICROPHONE to give the recording application permission to use the microphone.
Device not working with USB hub.	The MV51 requires 250 mA per port. Check USB hub documentation for current/port specification.

System Requirements and Compatibility

Windows	<ul style="list-style-type: none">• Windows 7 and Windows 8• Minimum RAM = 64 MB• USB 2.0
Macintosh	<ul style="list-style-type: none">• OS X Lion 10.7, OS X Mountain Lion 10.8, OS X Mavericks 10.9, OS X Yosemite 10.10• Minimum RAM = 64 MB• USB 2.0
iOS	<ul style="list-style-type: none">• iOS 8.0• iOS 7.0
iPhone	<ul style="list-style-type: none">• iPhone 5• iPhone 5c• iPhone 5s• iPhone 6• iPhone 6 Plus
iPod Touch	<ul style="list-style-type: none">• 5th gen
iPad	<ul style="list-style-type: none">• iPad 4th gen• iPad Air• iPad Air 2
iPad Mini	<ul style="list-style-type: none">• iPad Mini 1st gen• iPad Mini 2nd gen• iPad Mini 3rd gen

Furnished Accessories

1 m USB cable	AMV-USB
1 m Lightning cable	AMV-LTG
5/8" to 3/8" (Euro) Threaded Adapter	95A2050

Specifications

MF1 Certified

Yes

DSP Modes (Presets)

Speech/Singing/Acoustic/Loud/Flat

Transducer Type

Electret Condenser (25 mm)

Polar Pattern

Unidirectional (Cardioid)

Bit Depth

16-bit/24-bit

Sampling Rate

44.1/48 kHz

Frequency Response

20 Hz to 20,000 Hz

Adjustable Gain Range

0 to +36 dB

Sensitivity

-39 dBFS/Pa at 1 kHz [1] [2]

Maximum SPL

130 dB SPL [2]

Headphone Output

3.5 mm (1/8")

Power Requirements

Powered through USB or Lightning connector

Mute Switch Attenuation

Yes

Mounting Stand

Built-in

Stand Adapter

5/8-27 thread mount (standard mic stand mount)

Housing

all metal construction

Net Weight

574.7 g (20.27oz.)

Dimensions

128 x 86 x 70 mm H x W x D

Cable

1 m USB cable, 1 m Lightning cable

[1] 1 Pa=94 dB SPL

[2] At Minimum Gain, Flat Mode

Certifications

Information to the user

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada ICES-003 Compliance Label: CAN ICES-3 (B)/NMB-3(B)

Note: Testing is based on the use of supplied and recommended cable types. The use of other than shielded (screened) cable types may degrade EMC performance.

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.

The CE Declaration of Conformity can be obtained from:
www.shure.com/europe/compliance


Authorized European representative:
Shure Europe GmbH
Headquarters Europe, Middle East & Africa
Department: EMEA Approval
Jakob-Diefenbacher-Str. 12
75031 Eppingen, Germany
Phone: 49-7262-92 49 0
Fax: 49-7262-92 49 11 4
Email: info@shure.de

	적합등록번호 (MSIP Certification no.) : MSIP-REM-SHU-MV51
	기기 명칭 (Product Type) : 디지털 마이크 (Digital microphone)
	모델명 (Model Name) : MV51
	신청인/제조업체/원산지 (Manufacturer/COD) : Shure Electronics Co., Ltd. / China
	수입업체 (Importer) : 삼아프로사운드(주) (Sama ProSound Co., Ltd.)


"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPad, iPhone, iPod, iPod classic, iPod nano, iPod touch, and Retina are trademarks of Apple Inc., registered in the U.S. and other countries. iPad Air and iPad mini are trademarks of Apple Inc. The trademark "iPhone" is used with a license from Apple K.K.

Mac® and Lightning® are registered trademarks of Apple Inc.

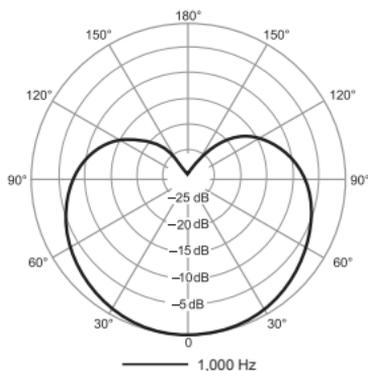

Polar Pattern

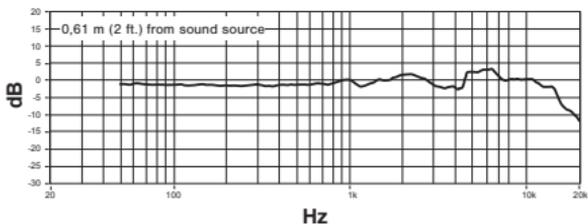

Frequency Response

SHURE
LEGENDARY
PERFORMANCE™

©2014 Shure Incorporated

United States, Canada, Latin
 America, Caribbean
 Shure Incorporated
 5900 West Wacker Avenue
 Skokie, IL 60074-6504 USA
 Phone: 847-880-2800
 Fax: 847-880-1212 (USA)
 Phone: 847-880-6948
 Email: usa@shure.com

Europe, Middle East, Africa
 Shure Europe GmbH
 Jahn-Unternehmens-Ctr. 13,
 78091 Heppenheim, Germany
 Phone: 49-7888-88480
 Fax: 49-7888-8848114
 Email: info@shure.de

Asia, Pacific
 Shure Asia Limited
 28/F, 628 King's Road
 North Point, Island East
 Hong Kong

Phone: 852-2683-4290
 Fax: 852-2658-4088
 Email: info@shure.com.hk

For more information, visit www.shure.com
 Shure's Microphones Division | 1001 N. LaSalle St. | Joliet, IL 61786-1000

USA@1.0001.3211